

■ Low Voltage Microwave Bi-level Sensor


ANT-9C Instruction



ANT-9C




RC-100

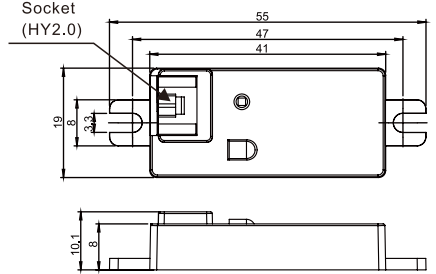


SPECIFICATIONS

Power supply	12V DC
HF System	5.8GHz±75MHz
Dim control output	0-10V, max. 25mA sinking current
Detection radius/angle	Max 16ft.(5m)/360°
Mounting height	Max 12ft
Remote range	50ft. (15m) indoor, no backlight
Humidity	Max. 95% RH
Temperature	-40°F ~ 158°F (-40°C ~ 70°C)

NOTE: The high-frequency output of this sensor is <math><0.2\text{mW}</math>-that is just one 5000th of the transmission power of a mobile phone or the output of a microwave oven.

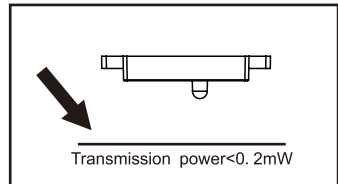

SENSOR COVERAGE

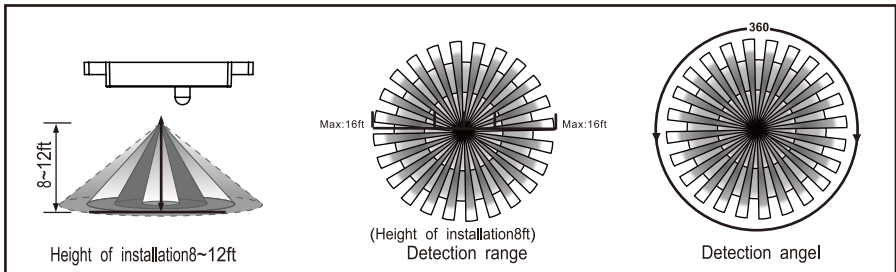

Once powering the device up, the ANT-9C will use factory default parameters to operate. If adjustments are needed, "RC-100" Wireless IR Configuration tool must be used.

■ Low Voltage Microwave Bi-level Sensor

ANT-9C Instruction


UTILIZING FIELD AND INTRODUCTION

ANT-9C is a moving object sensor that can detect range of 360° and its working frequency is 5.8GHz. The advantage of this product is stable working state (stable working temperature: -40°C~+70°C), ANT-9C adopts a microwave sensor (high-frequency output <0.2mW), so that it is safe and performs better than infrared sensor.


FUNCTION AND OPTIONS

The microwave sensor to achieve tri-level dimming control, for some areas that require a light change notice before switch off.


It offers 3 levels of the light Control : 100%--dimming light (0/10%/30%/50%)--off; and 2 periods of selectable waiting time: motion hold-time and stand-by time, Selectable daylight threshold and choice of detection area.

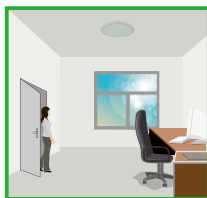

With sufficient natural light, the light does not switch on when presence detected.

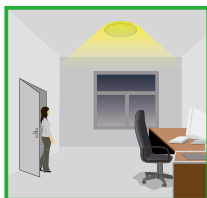

With insufficient natural light, the sensor switches on the light automatically when person enters the (options) standby level after the room. The lamp never switch off with presence, even the nature light is sufficient.

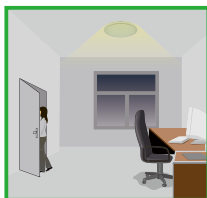

People left, lamp still dims to 0/10%/30%/50% (options) standby level after the hold time.



Light switches off automatically after the dimming time elapsed.

WIRING DIAGRAMS

ANT-9C wiring with dimming ballast or LED driver.

