

IMPORTANT**READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE
REFERENCE.**


Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. **THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON.**

FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

POLE MOUNT

1. Make the wiring connections with UL approved connectors knot the wires for strain relief.
2. Round Pole Adapter can fit with 3" or 2 3/8" diameter. Slip Round Pole Adaptor over tenon.
For 3" Pole use shorter (3/8") pole set screw and for 2 3/8" pole use longer (7/8") pole set screws to secure the fixture to the pole.

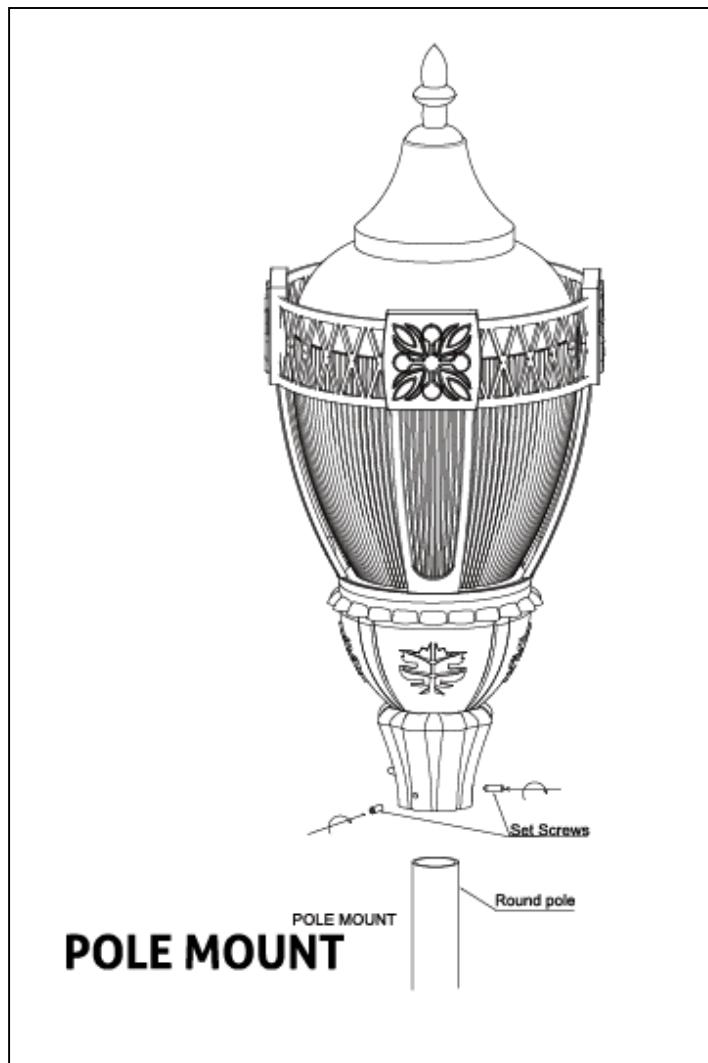


WIRING

WARNING: Before Wring, Make certain the input voltage is correct!

1. Connect the black fixture lead to the (+) LINE supply lead.
2. Connect the white fixture lead to the (-) COMMON supply lead.
3. Connect the GROUND wire from fixture to supply ground

0-10V DIMMABLE WIRING

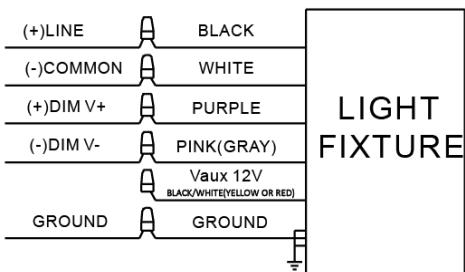

4. Connect the purple fixture lead to the (V+) DIM lead.
5. Connect the Pink(Gray) fixture lead to the (V-) DIM lead.
6. Cap the Vaux 12V fixture lead, if present. Do NOT connect.

TROUBLESHOOTING

1. Check that the line voltage at fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

CLEANING&MAINTENANCE


CAUTION: Be sure fixture temperature is cool enough to Touch. Do not clean or maintain while fixture is Energized.

1. Clean lens & fixture with non-abrasive glass cleaning solution.
2. Do not open fixture to clean the LED. Do not touch the LED

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation operation or maintenance.

WATTAGE&CCT ADJUSTABLE SWITCH SETTING

(Only for the Models with Power and CCT adjustable functions)

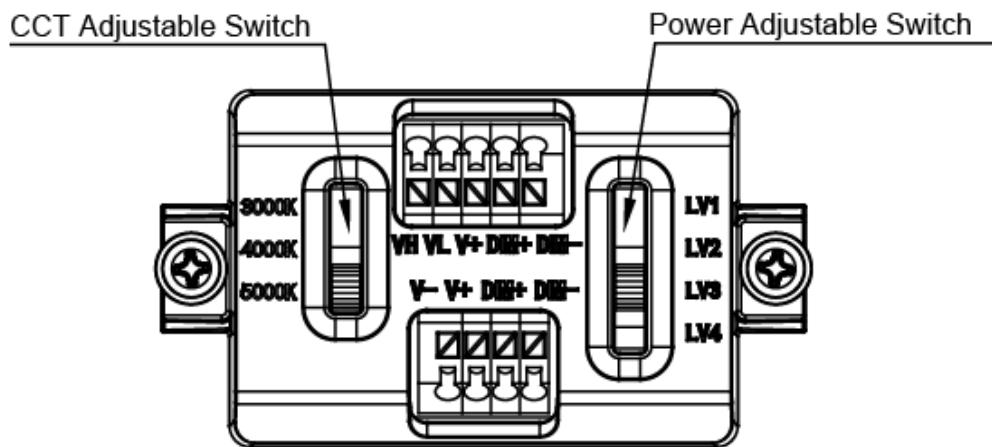

CCT	3000K /4000K/5000K (default: 5000K)
Power (80W)	LV1:80W /LV2:60W /LV3:40W /LV4:25W (default: 80W)